

COMPLEX SOLUTIONS MADE SIMPLE.



Module Configuration

This document details the different connection methods used between DSE controllers and the PC and also shows the different configuration methods possible across the DSE range.

- **Configuration by Windows PC**

Direct USB Connection

Uses USB Type A to Type B lead (The same as typically used on a USB printer).

Module range	Front panel config	PC config	PC Software
8700 series	Selected items	✓	DSE Configuration Suite
8600 series	Selected items	✓	
7300 series	Selected items	✓	
7200 series	Selected items	✓	
7100 series	✓ All items	✓	
6100 series	✓ All items	✓	
6000 series	✓ All items	✓	
4400 series	✓ All items	✓	
3100 series	✓ All items	✓	
332/333 series ATS	Selected items	✓	

813 interface

Module range	External switch configuration	PC config	PC Software
103 MKII	Selected items depending upon module configuration	✓	DSE Configuration Suite
402 MKII		✓	

810 interface

Available in USB (recommended) or RS232 (for legacy PC support) versions.

Module range	Front panel config	PC config	PC Software
7500 series	Selected items	✓	5xxx for Windows
5500 series	Selected items	✓	
5300 series	Selected items	✓	
5200 series	Selected items	✓	
5100 series MKII*	✓ All items	✓	
710/720	✗	✓	7xx for Windows
55x series	✗	✓	P810 for Windows

*5110 MK 1 controller is not PC configurable, front fascia configuration only.

808 interface

Available only for RS232 ports. If your PC does not have an RS232 port, you will need to add a PCI (desktop PCs) or PCMCIA (laptop PCs) card, available from all good PC stockists. DSE do not recommend the use of RS232 to USB convertors.

Module range	Front panel config	PC config	PC Software
51x / 52x / 530 / 54x / 560	x	✓	P808 for Windows

- **Front panel configuration**

- o Modules with front panel configuration are supplied with *installation instructions* giving details of installation and configuration. Alternatively this information is contained on the DSE website at www.deepseapl.com. Registration is not required for access to these documents.

- **Useful part numbers**

DSE Part Number	Description
0806-001-15	DSE Configuration Suite Software CD and DSE USB controller drivers
0806-001-03	DSE Software CD (contains 700 series PC software, P810 software, P810 USB drivers, P808 software, 5000 series software, legacy 606 software)
0810-001-03	P810 interface (RS232) with 0806-001-03 Software CD included
0810-002-00	P810 interface (USB) with 0806-001-03 Software CD included
0813-01	813 interface (USB) for use with DSE103MKII, DSE402MKII
016-125	USB Type A to Type B lead for DSE USB controllers

- **Software on the web**

- o All DSE software is available at www.deepseapl.com to registered members. Registration and download is free of charge.

