 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 




Alternator Plug Number Guide

 R S L PLUG 1	 E F N A PLUG 2	 N F PLUG 6	 L S PLUG 7	 S L PLUG 8	 R L PLUG 9	 IG L PLUG 10	 IG L PLUG 11
 S IG L PLUG 12	 C FR IG L PLUG 13	 S FR IG L PLUG 14	 E F N PLUG 15	 F E N PLUG 16	 E F P PLUG 17	 E F P PLUG 18	 L IG S PLUG 19
 L IG S PLUG 20	 F N B PLUG 21	 D+ B+ B+ PLUG 22	 S PLI PLUG 23	 S PLI PLUG 24	 D+ D- DF PLUG 25	 L PLUG 26	 L + PLUG 27
 D- DF D+ PLUG 28	 D+ B+ PLUG 29	 IG N L S PLUG 30	 W D+ B+ PLUG 31	 IG L S PLUG 32	 FR IG L PLUG 33	 N E B+ F PLUG 34	 R F PLUG 35
 L IG S PLUG 36	 E N F PLUG 37	 E F P PLUG 38	 SL PLUG 39	 IG C L PLUG 40	 L IG PLUG 41	 L IG S PLUG 42	 S IG PLUG 43
 PLF S PLUG 44	 D+ DF PLUG 45	 IL PLUG 46	 IG S L PLUG 47	 DF I PLUG 48	 N L R 20V I PLUG 49	 AS I PLUG 50	 L R PLUG 51
 N L R PLUG 52	 L IG S PLUG 53	 IG L PLUG 54	 R L PLUG 55	 + Ref D- PLUG 56	 S L P 14V out PLUG 57	 L DFM PLUG 58	 L B DFM PLUG 59
 W 15 DFM L S PLUG 60	 S IG L PLUG 61	 L S PLUG 62	 W L PLUG 63	 L S N PLUG 64	 L R PLUG 65	 R L PLUG 66	 R N L PLUG 67
 B L DFM PLUG 68	 S L PLUG 69	 L R PLUG 70	 P IG L PLUG 71	 IG L S R PLUG 72	 S DFM Ind R PLUG 73	 D Ind Ign R PLUG 74	 PLUG 75
 IG S L M PLUG 76	 L PLUG 77	 C S L PLUG 78	 S RC LI PLUG 79	 R L N F+ F- E PLUG 80			

Alternator Terminal Identification Chart

SYSTEM	FIELD	BATTERY POSITIVE	BATTERY SENSE	GROUND EARTH	NEUTRAL	INDICATOR LIGHT	IGNITION	PHASE/ STATOR TAP	DUMMY	CPU CONTROL
BOSCH	DF	B+	BS	B- /D-		D+		W/R		
CAV	DF	B+		D-		D+		W		
DELCO REMY	F	B+	M/S	NEG		IND	IGN	R		
DENSO	F	B+	S	E	N	L	IG	P		M/FR
FORD	DF/F	A /B+	S	D- /-VE		L /I		S		
HITACHI	F	B/A	S	E	N	L	IG /R	P	D	FR
ISKRA	DF	B+		B- /D-		D+		W		
LEECE NEVILLE	F	B+		B-		TRIO	IGN	R		
LUCAS	DF	B+		B-		D+	IGN	W		
MAGNETI MARELLI	DF/67	B+/30		31/B-	C	15		W		
MITSUBISHI	F	B/A	S	E	N	L	IG /R	P	D	FR
MOTOROLA	EXC	B+		B-		IND		R		
NIKKO	FLD	B+/S		B- /E		L	R			
PRESTOLITE	F	B+		B-		IND/R	IGN	R		
SAWAFUJI		B+	S	B- M	N	L	R	P		
VALEO	DF	B+		B-		D+		E		

SYSTEM	DYNAM O FIELD MON.	REG. CONTROL	LOAD INDICATOR	VOLT OUTPUT		
				12V	24V	20V
BOSCH	DFM					
CAV						
DELCO REMY						
DENSO		RC	LI			
FORD						
HITACHI						
ISKRA						
LEECE NEVILLE						
LUCAS						
MAGNETI MARELLI						
MITSUBISHI						
MOTOROLA						
NIKKO				R	R	
PRESTOLITE						
SAWAFUJI				R	R	R
VALEO						