

# BAC06A2 SWITCH-TYPE BATTERY CHARGER USER MANUAL



郑州众智科技股份有限公司 SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.



# SmartGen Registered trademark

No.28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Email: sales@smartgen.cn

Web: www.smartgen.com.cn

www.smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

**Table 1 Software Version** 

Date	Version		Note
2025-06-23	1.0	Original release.	



# **CONTENTS**

1	OVERVIEW	. 4
2	PERFORMANCE AND CHARACTERISTICS	. 4
3	CHARGING PRINCIPLE	. 4
4	SPECIFICATION	. 5
5	NO-LOAD VOLTAGE FINE TUNING	. 5
6	OPERATION	. 5
7	CASE DIMENSIONS	. 6
8	ORDER INFORMATION	. 6





#### 1 OVERVIEW

BAC06A2 switching battery charger adopts the latest switch power components, which is designed for charging lead-acid starting battery according to its property. The charger is suitable for lead-acid battery float charge. The maximum charge current for 12V charger is 6A; the maximum charge current for 24V charger is 3A.

#### 2 PERFORMANCE AND CHARACTERISTICS

Characteristics are as below:

- Designed in switching power structure, wide range of AC voltage input, small volume, light weight and high efficiency;
- Two-stage charging method (constant current firstly and then constant voltage), fully considering charging property of the lead-acid battery, can avoid overcharging and extend the battery life to the fullest;
- With short circuit and reverse connection protection;
- Charging voltage can be adjusted via potentiometer on site;
- LED display: Power indication and charging indication;
- Horizontal type for installation of BAV06A2, easy to install.

#### **3 CHARGING PRINCIPLE**

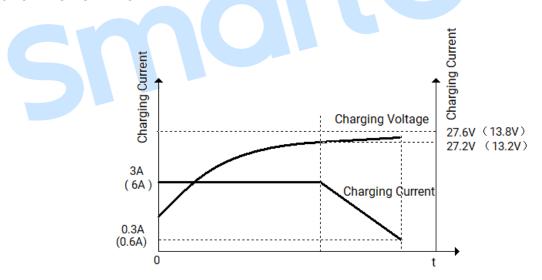


Fig.1 - Charge Principle

According to charging property of the lead-acid battery, battery charger uses 2-stage charging method and charge mode is "constant-current", and the charging current is 3A(6A). When battery voltage is under the threshold, it is charging in constant-current mode; when the battery voltage is higher than the threshold, the charging current is decreasing as the battery voltage is rising until it reaches the set voltage, and then charge mode is turned into "floating charge". Charge current is gradually reducing and battery voltage is rising up to the set value. When charging current is lower than 0.3A(0.6A), the battery is basically fully charged (charging indicator eliminates). Afterwards, charging



current will offset self-discharge of the battery and long time charging does no harm to the battery. Thus the charger can not only maintain a full charged condition and but also ensure the battery life.

#### 4 SPECIFICATION

**Table 2 Product Parameters** 

Category	Items	12V	24V
Input Characteristi cs	Nominal AC Voltage	AC (100~277)V	
	Max. AC Voltage	AC (90~305)V	
	AC Frequency	50Hz/60Hz	
	No-load Power	<2W	
	Consumption		
	Max. Input Current	1.5A	
	Max. Efficiency	90%	
Output	Rated Charging Current	6A	3A
Output Characteristi	Max. Power	82W	
Characteristi	Min. Voltage	8.6V	16.8V
CS	No-load Voltage	13.8V, (Error ±1%)	27.6V, (Error ±1%)
	Insulation Resistance		ut, input and shell both are:
Insulation	insulation resistance	DC500V 1min R <sub>L</sub> ≥500MΩ	
		Between input and output, input and shell both are:	
	Insulation Voltage	AC2200V 50Hz 1min	
		Leakage current: I <sub>L</sub> ≤3.5mA.	
Working Conditions	Working Temperature	(-30~+55)°C	
	Storage Temperature	(-40~+85)°C	
	Working Humidity	20%RH~93%RH (No condensation)	
Profile	Weight	0.56kg	
	Dimension	143mm×96mm×53mm (Length*Width*Height)	

# **5 NO-LOAD VOLTAGE FINE TUNING**

During on-site voltage adjustment, disconnect the battery from the charger. Adjust the voltage potentiometer (VOLTS ADJ) while measuring the output voltage of charger until reaching the appropriate value.

# **6 OPERATION**



Fig.2 - BAC06A2 Panel



**Table 3 Operation Instructions** 

Terminal	Function	Description
L		Terminals L and N connect to AC (100~277)V. It is
N	AC Input Terminal	recommended to use BVR 1mm <sup>2</sup> stranded copper wire.
B-	Charger Output Negative	Connect to battery negative. It is recommended to use BVR 1.5mm <sup>2</sup> stranded copper wire.
B+	Charger Output Positive	Connect to battery positive. It is recommended to use BVR 1.5mm <sup>2</sup> stranded copper wire.
POWER	Green LED Indicator	Power status indicator
CHARGING	Red LED Indicator	Charging status indicator

NOTE1: Because there is diode and current-limiting circuit inside charger outputs, it can be used together with charging generator in parallel, and there is no need to disconnect the charger at cranking.

NOTE2: For application on genset, high current will cause voltage drop in charging line, so recommend separately connecting to battery terminal to avoid disturbance on sampling precision.

# **7 CASE DIMENSIONS**

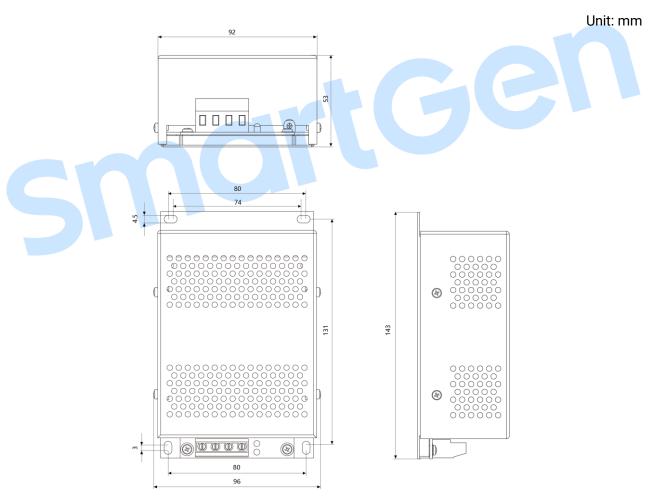


Fig.3 - BAC06A2 Dimension

# **8 ORDER INFORMATION**

When ordering BAC06A2 chargers, please choose charger types according to installation and voltage



as the chart below:

# **Table 4 Charger Model**

Model	Battery Type	Rated Output Current
BAC06A2-12V	12V	6A
BAC06A2-24V	24V	3A

\_\_\_\_\_

